UFORIA Motocaddy Adapter Installation Instructions

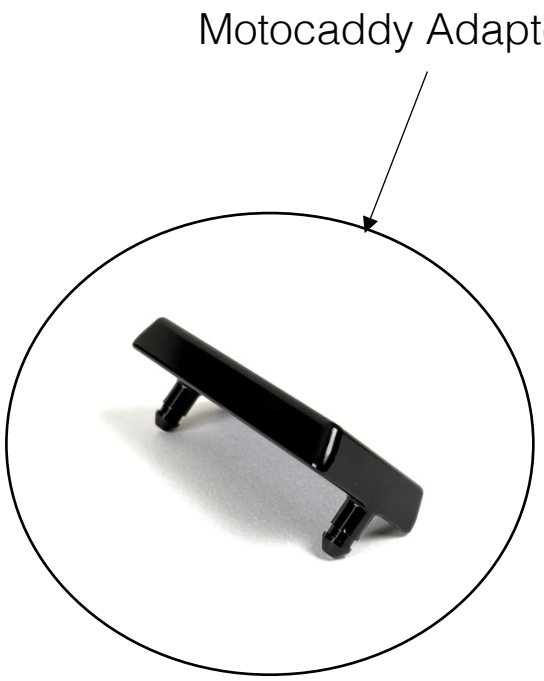

Place the Motocaddy adapter locking pins into the inserts at the bottom of the trundler.

Using a Phillips head screwdriver, unscrew the two screws holding the brackets to make room for the UFORIA bag.

You won't be needing these for the UFORIA system, store them somewhere safe.

Find the locking buttons either side of the back post underneath the backstay. Adjust the backstay into the lower position as shown in the photos.

Using the two cart connect straps provided; Place the strap through the d-ring of the UFORIA system and attach to the MotoCaddy.

Make sure the strap runs over the back stay and around the back post pictured.

Pull the strap through and lock firmly in place as shown in the photos.

Pull the elastic motocaddy strap over the base of the UFORIA system and make sure the strap is firmly in place.